

MARATHON

SILVER **50422**

 
 
 
 
BLACK **50423**

WWW.AGURI.EU



LIT Pritvirtinimo instrukcijos
 PL Instrukcja montażu
 CZ Návod na montáž
 SK Návod na montáž
 SLO Navodila za pritrjevanje
 HR Uputa za sastavljanje
 HU A felszerelés módja
 GR Οδηγίες συναρμολόγησης
 UA Інструкція з монтажу
 BY Інструкцыя па мантажы
 RO Instrucțiuni de montare
 TK Uydurma talimat
 N Monteringsveiledning


I Istruzioni per il montaggio
 GB Fitting instructions
 F Instructions de montage
 D Montageanleitung
 E Instrucciones de montaje
 NL Montage-instructies
 DK Monteringsinstruktion
 FIN Asennusohje
 S Monteringsanvisning
 RU Инструкция по установке
 PT Instruções de Montagem
 EST Paigaldusjuhend
 LAT Stiprināšanas instrukcija

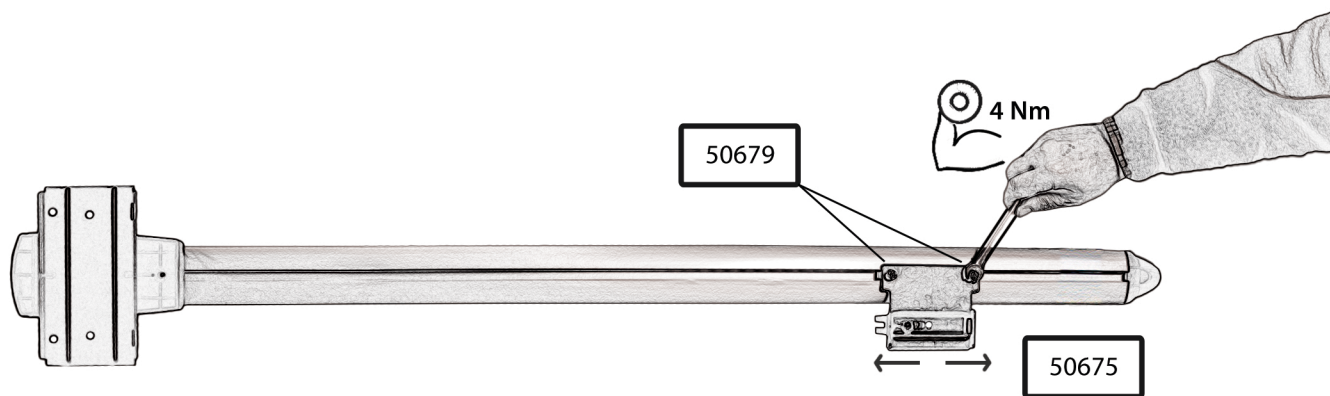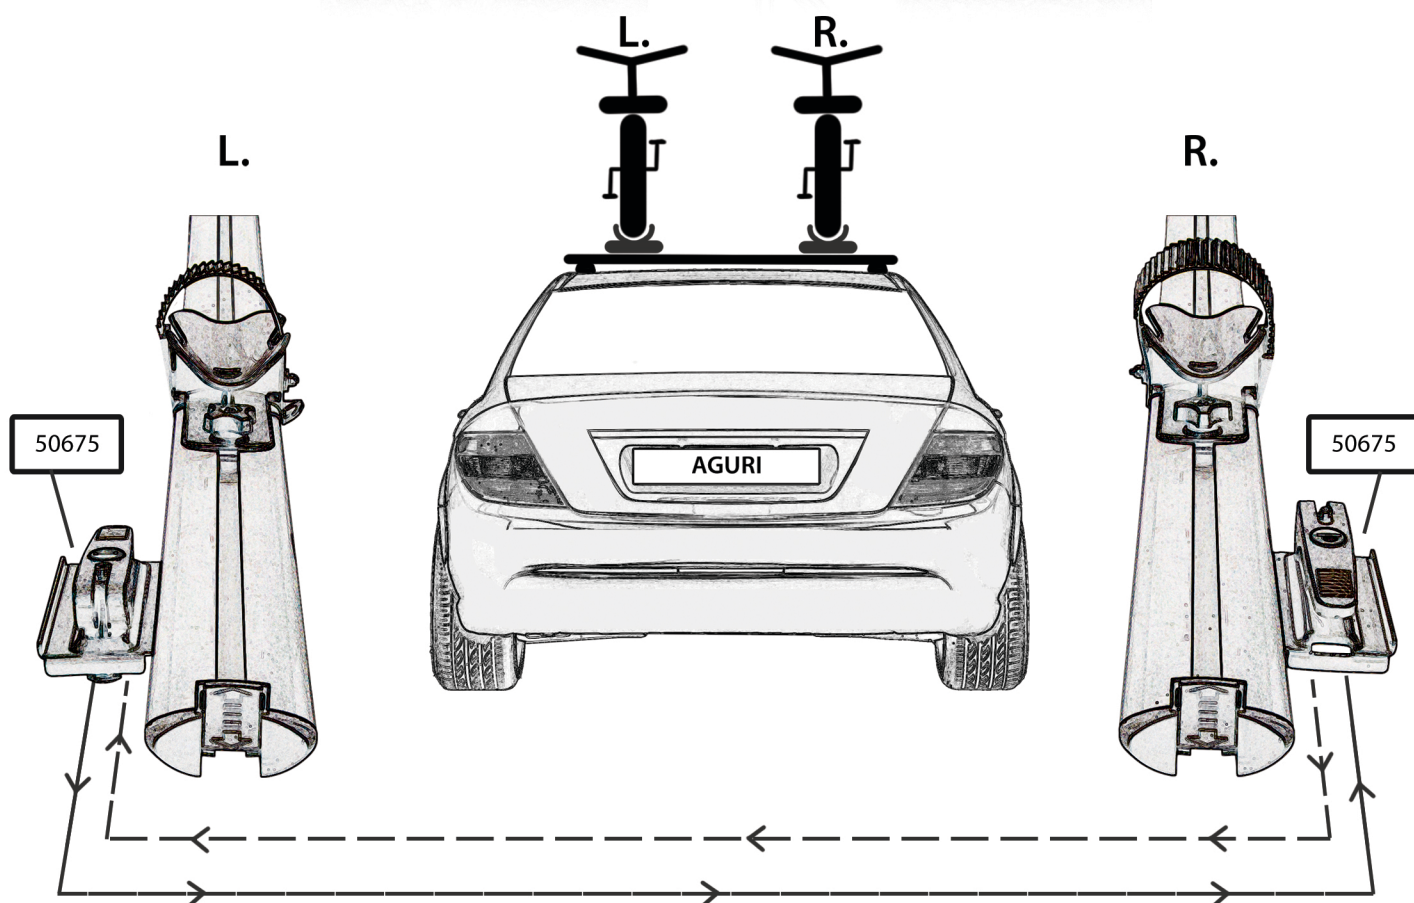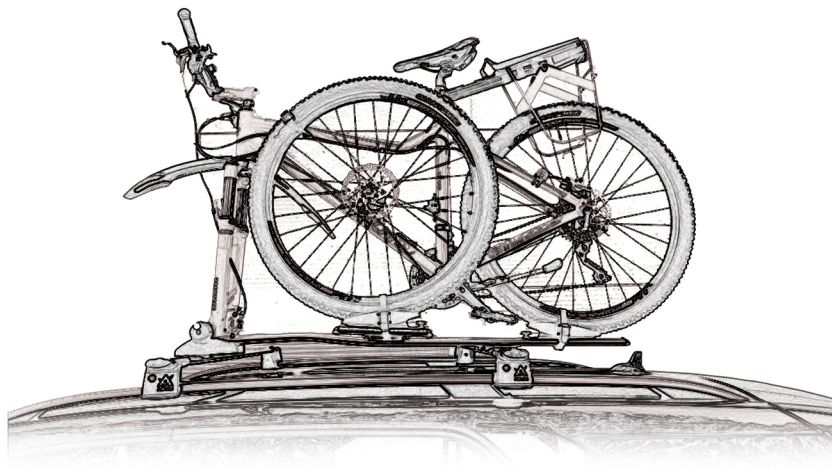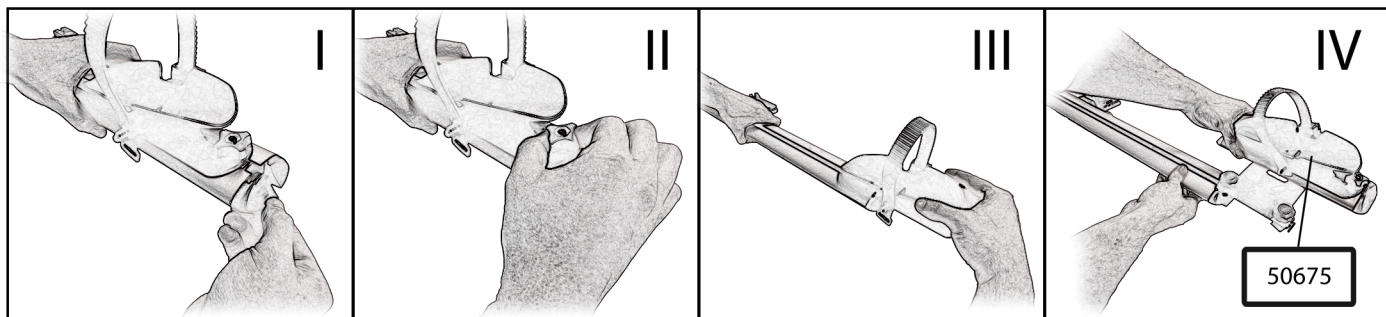


INSTALLATION

FRONT

 
1.

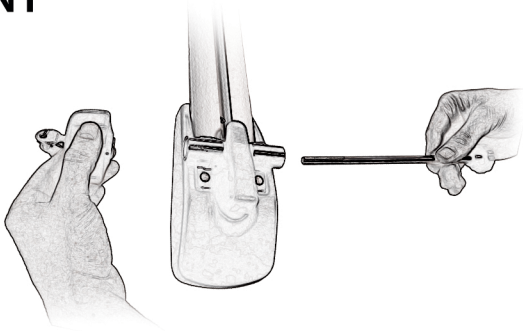

 
2.

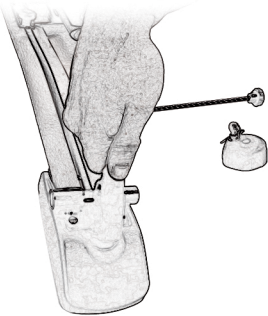

 
3.

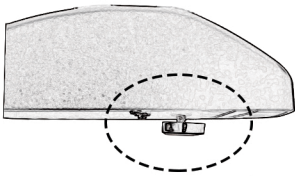

 
4.

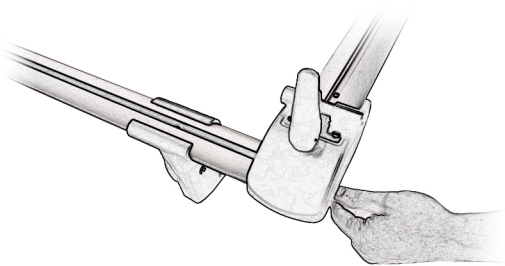

 5.

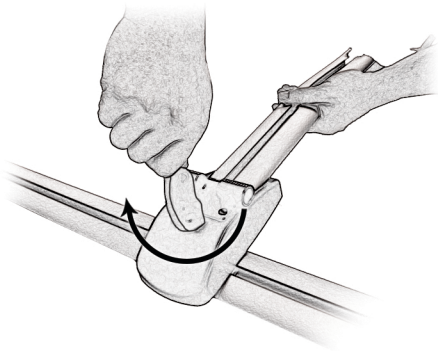


 6.

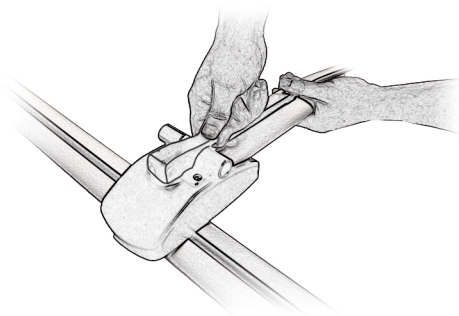


REAR

 
1.

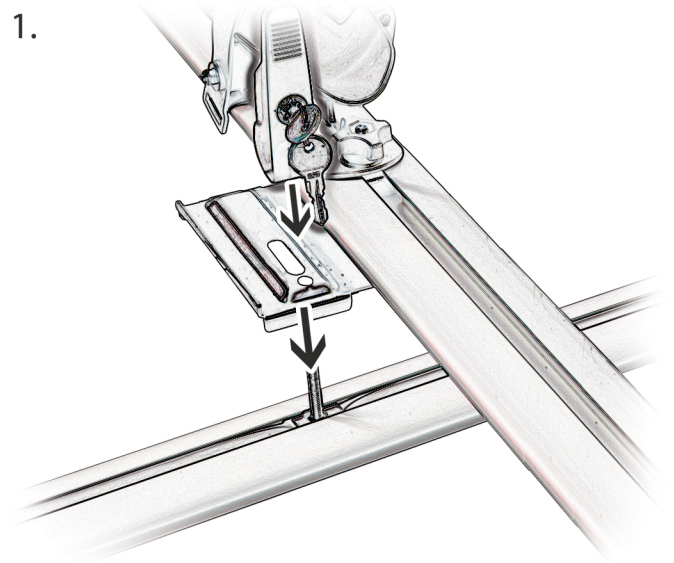


 2.

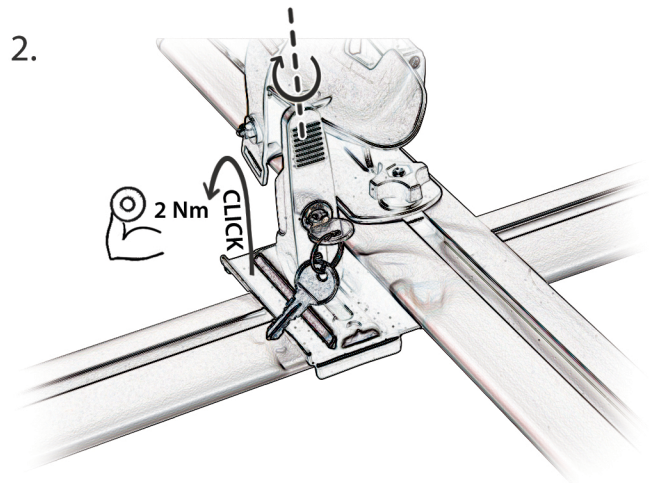

  
3.

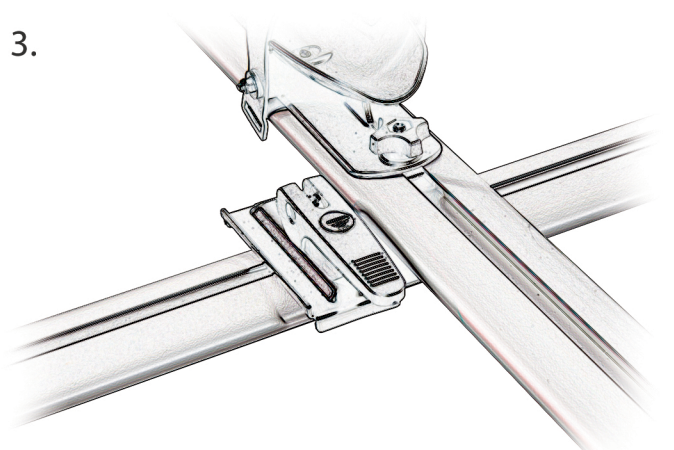

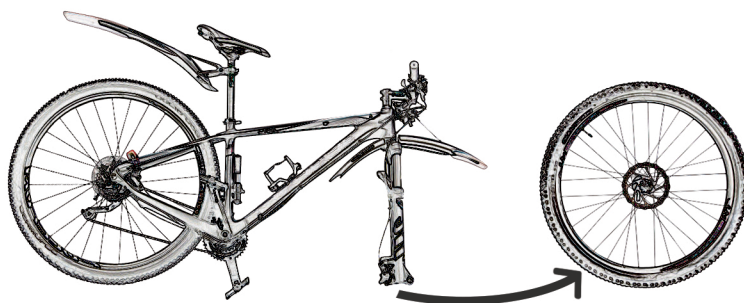


ADAPTERS 50976

	Adapter A  2 pc. Adapter D  2 pc.	9x100 (A+D+D+A)
	Adapter C  1 pc. Adapter D  2 pc. Adapter B  1 pc. Adapter A  1 pc.	12x100 (B+D+D+C+A)
	Adapter C  2pc. Adapter D  2 pc.	15x100 (C+D+D+C)

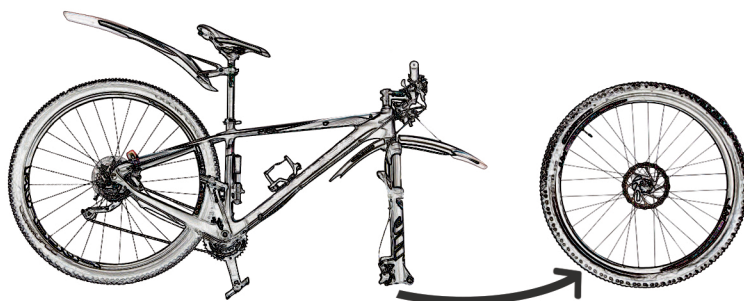 

ADAPTERS 50976

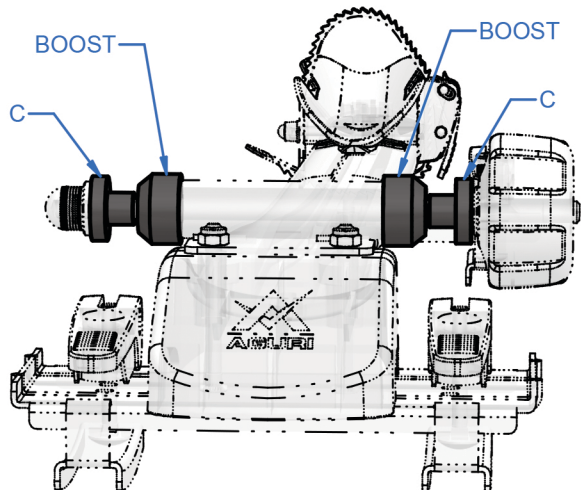 

Adapter C



 
2 pc.

Adapter BOOST



2 pc.

BOOST
(C+BOOST+BOOST+C)

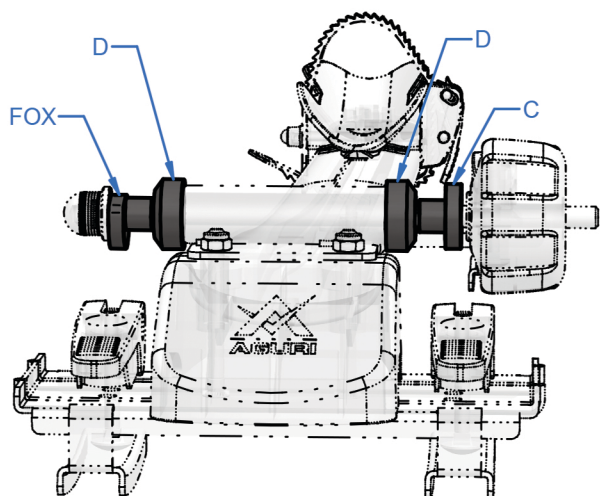

Adapter FOX



1 pc.

Adapter C




2pc.

Adapter D



2 pc.

 FOX 100
(FOX+D+D+C)

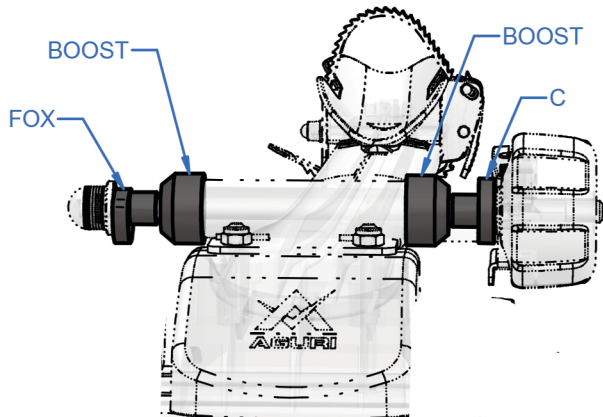

Adapter C



1 pc.

Adapter BOOST





2 pc.










Adapter FOX



1 pc.

           FOX 110
(FOX+BOOST+
+BOOST+C)

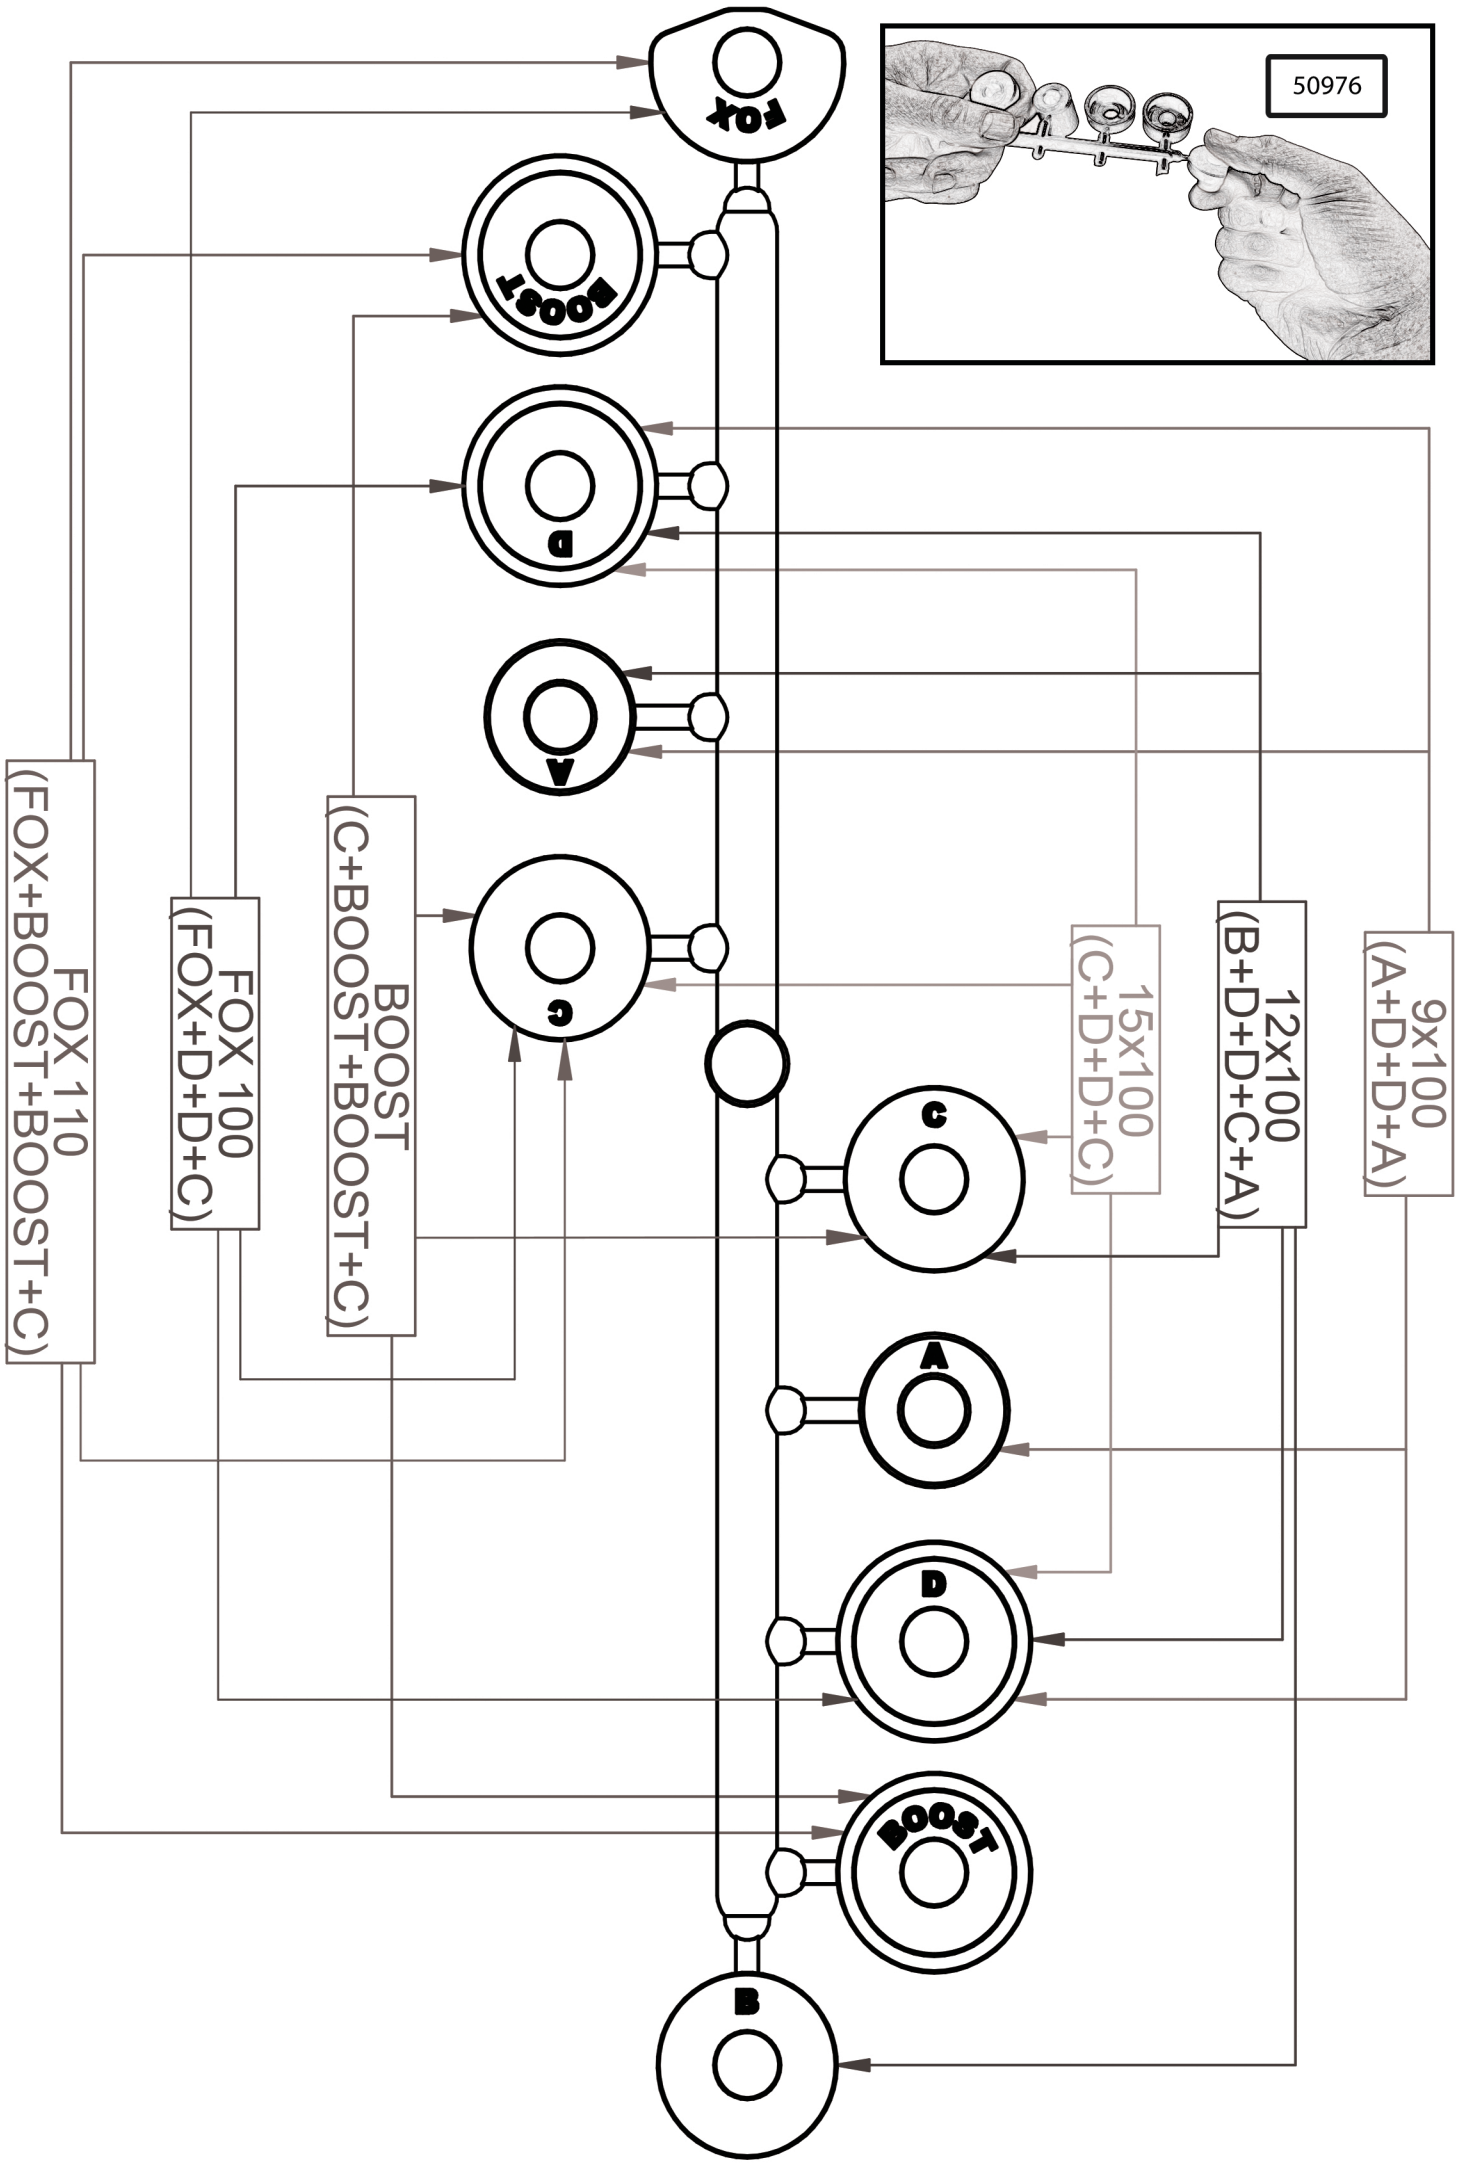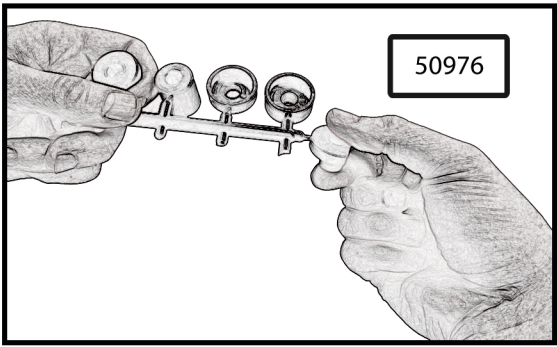

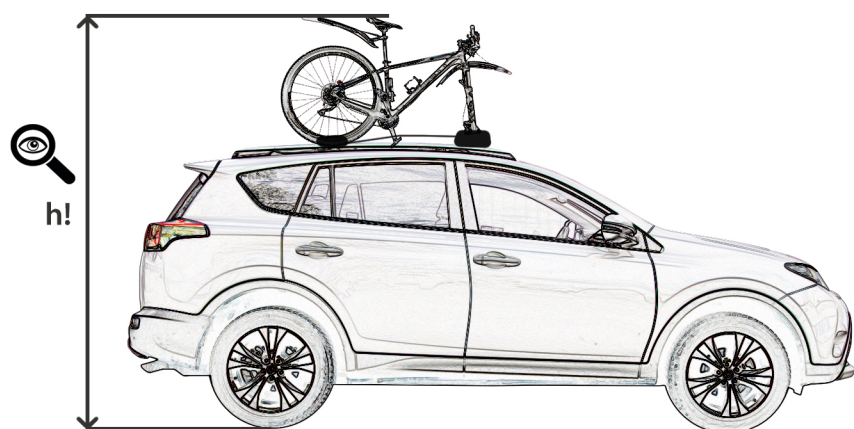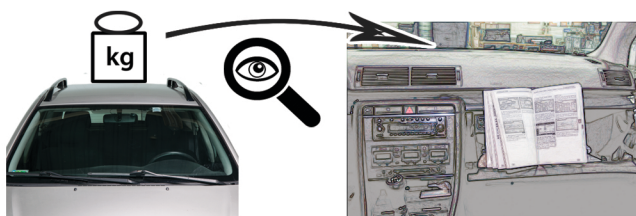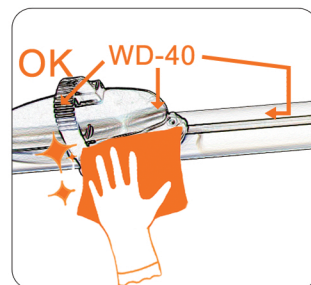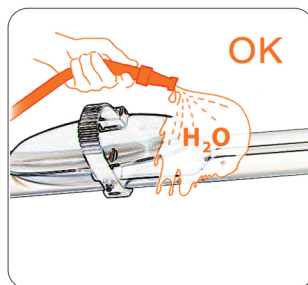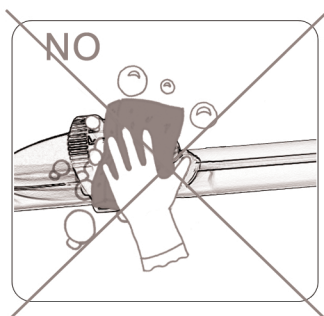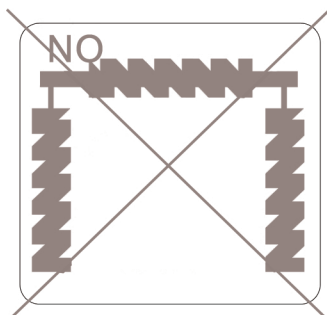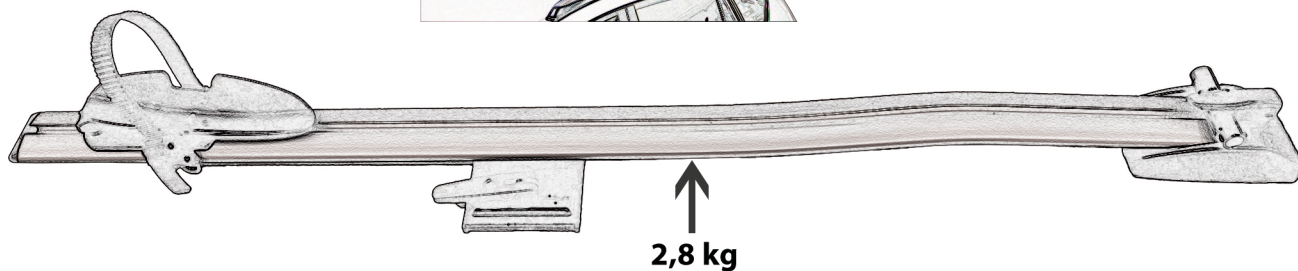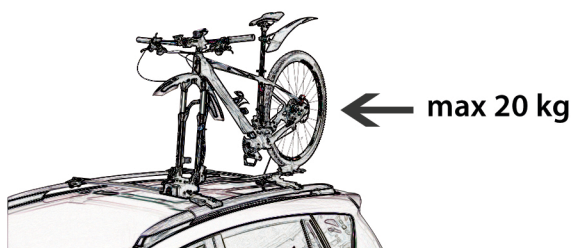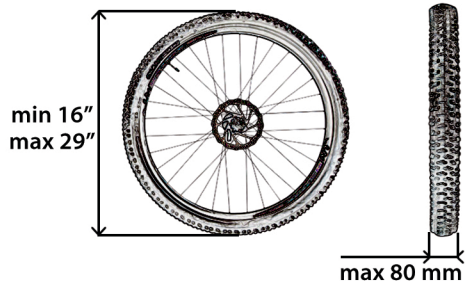

20 km --> CHECK





WWW.AGURI.EU