



50512 ACTIVE BIKE 2

 


50514 ACTIVE BIKE 3



AGURI

WWW.AGURI.EU

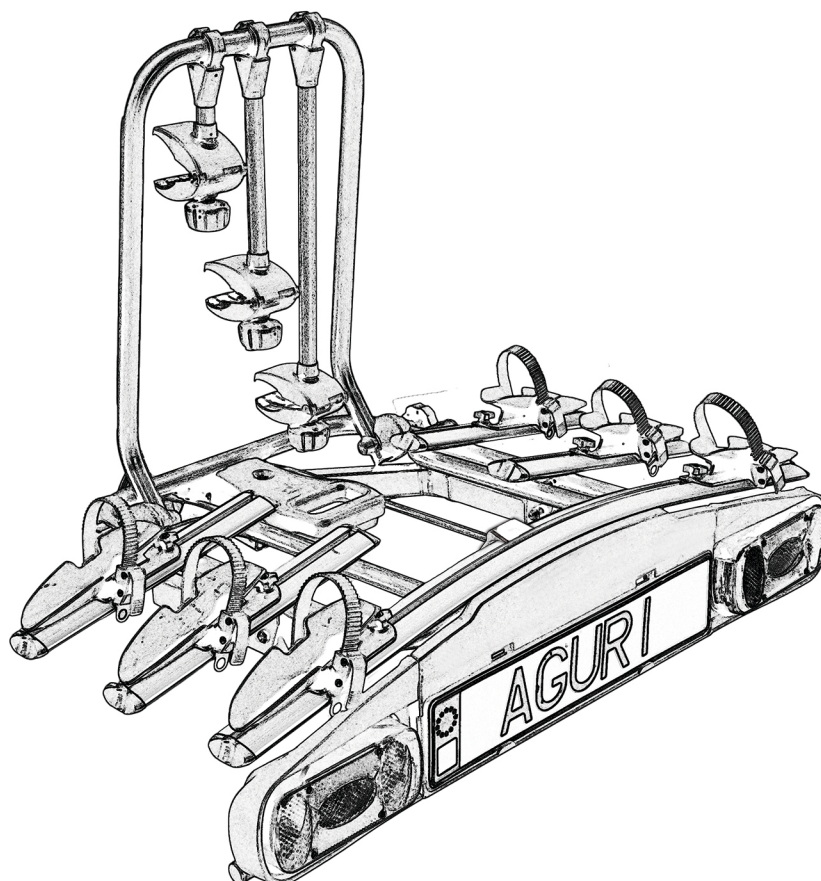

LIT Pritvirtinimo instrukcijos

PL Instrukcja montażu

CZ Návod na montáž

SK Návod na montáž

SLO Navodila za pritrjevanje

HR Uputa za sastavljanje

HU A felszerelés módja

GR Οδηγίες συναρμολόγησης

UA Інструкція з монтажу

BY Інструкцыя па мантажы

RO Instrucțiuni de montare

TK Uydurma talimat

N Monteringsveiledning

I Istruzioni per il montaggio

GB Fitting instructions

F Instructions de montage

D Montageanleitung

E Instrucciones de montaje

NL Montage-instructies

DK Montering instruktion

FIN Asennusohje

 
S Monteringsanvisning

RU Инструкция по установке

PT Instruções de Montagem




EST Paigaldusjuhend

LAT Stiprināšanas instrukcija



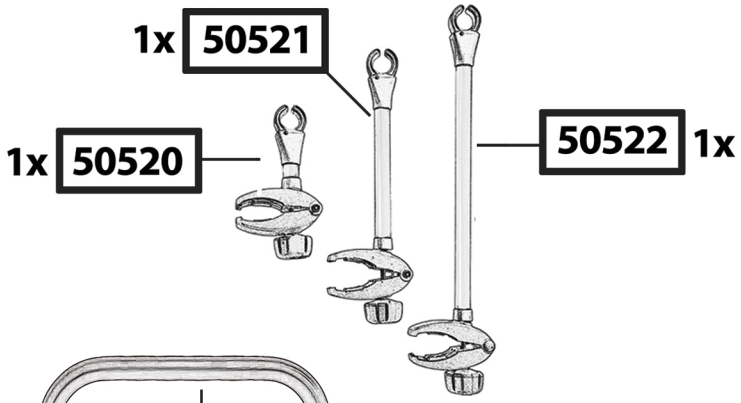







4x **50523**



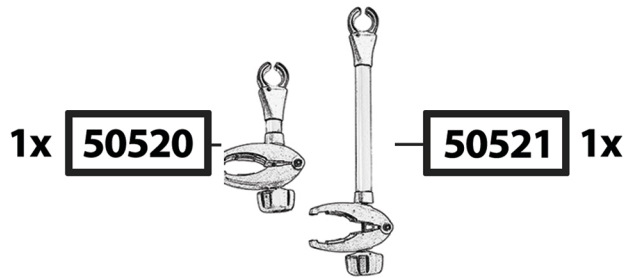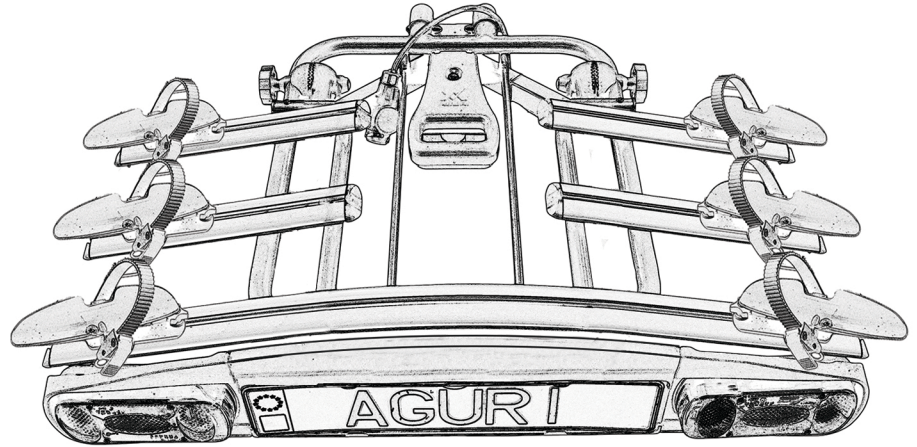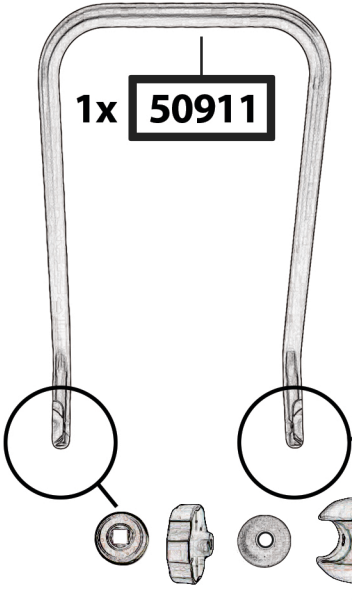   

        
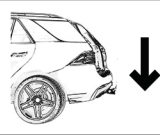 
50514 ACTIVE BIKE 3

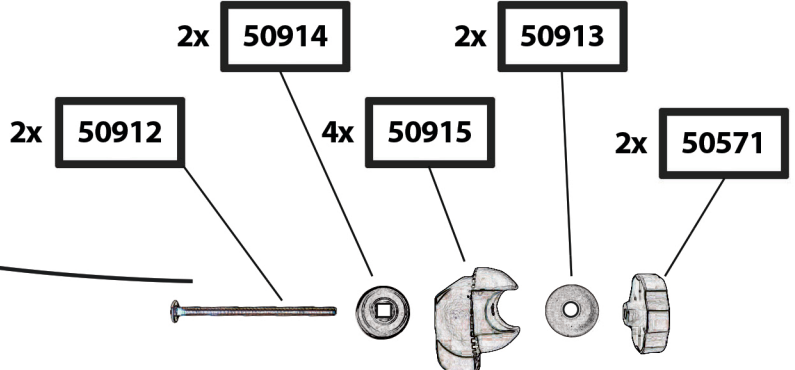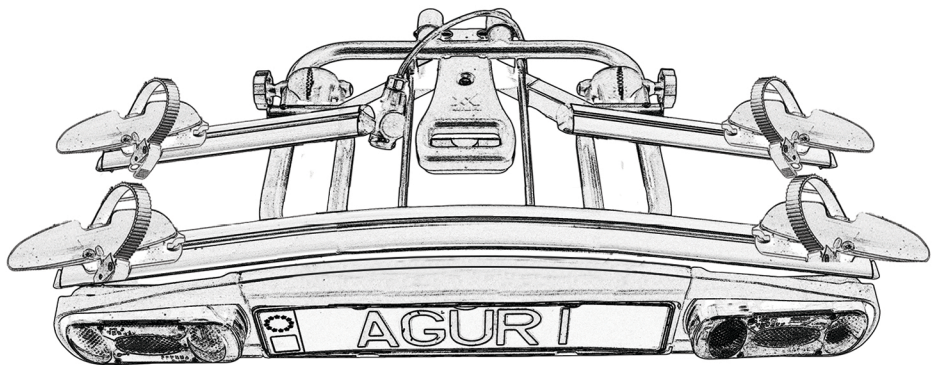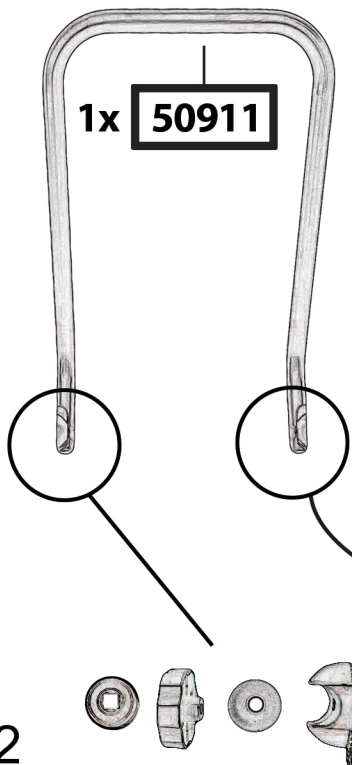

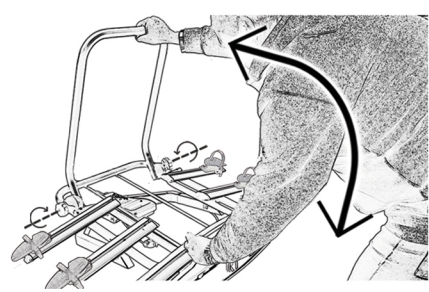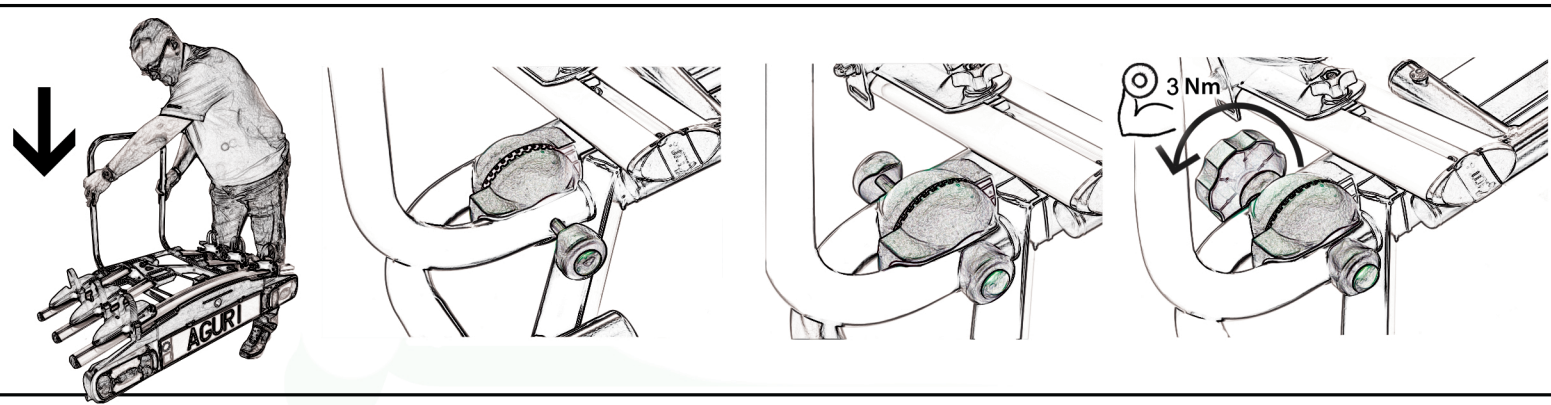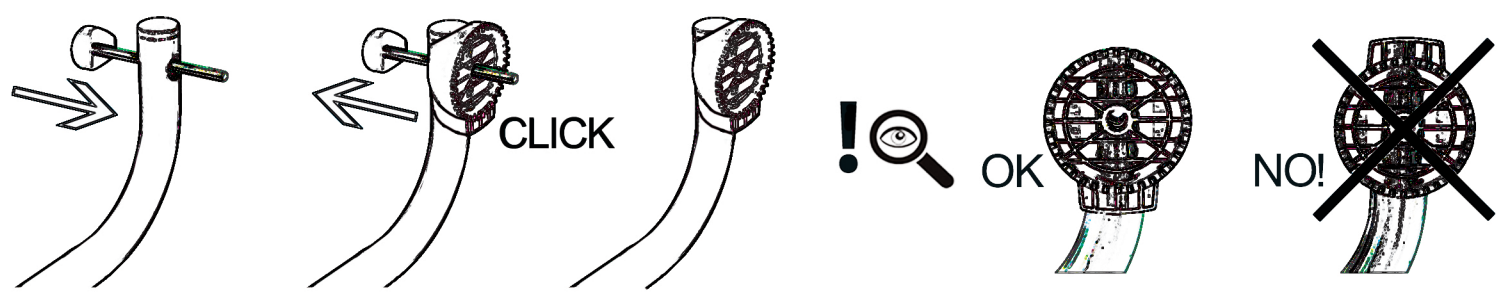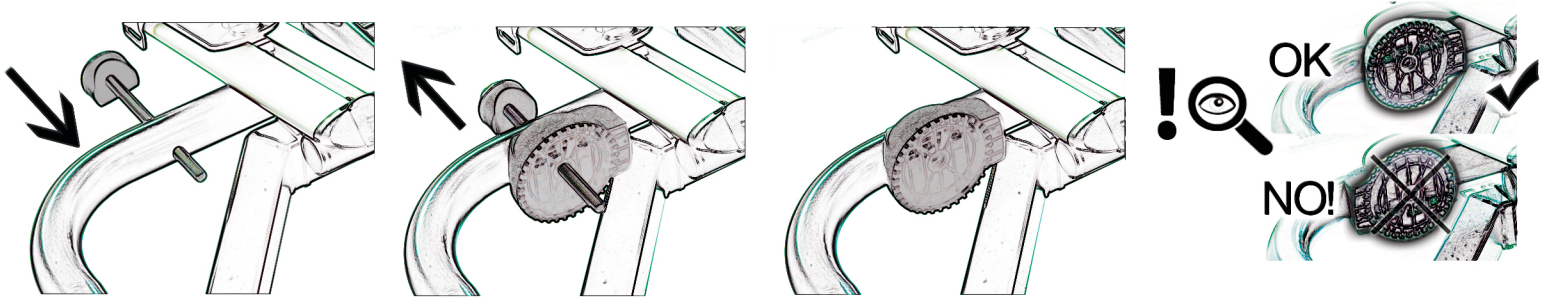
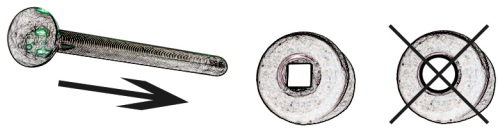
50512 ACTIVE BIKE 2






	50512		50514	
 KG				
	19,5 KG		21 KG	
50 KG	-19,5 KG	30,5 KG	-21 KG	29,5 KG
60 KG	-19,5 KG	40,5 KG	-21 KG	39,5 KG
70 KG	-19,5 KG	50,5 KG	-21 KG	49,5 KG
80 KG	-19,5 KG	60,5 KG	-21 KG	59,5 KG

  
1.

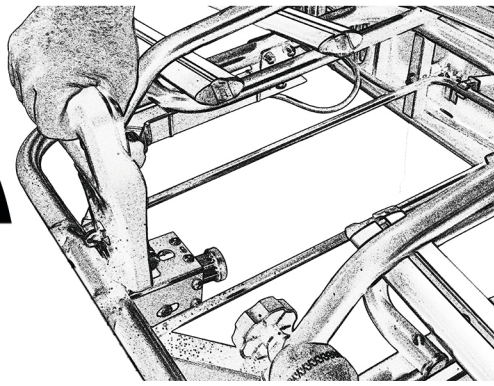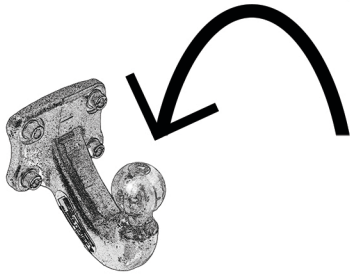

 
2.

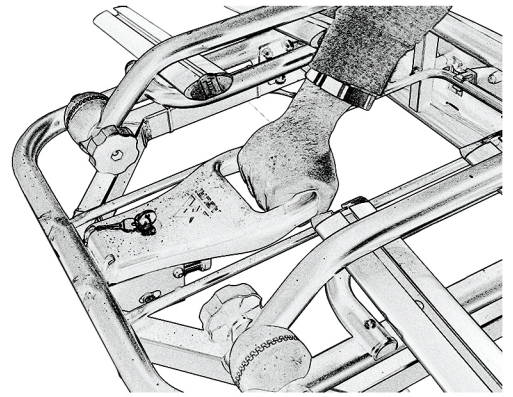

 
3.

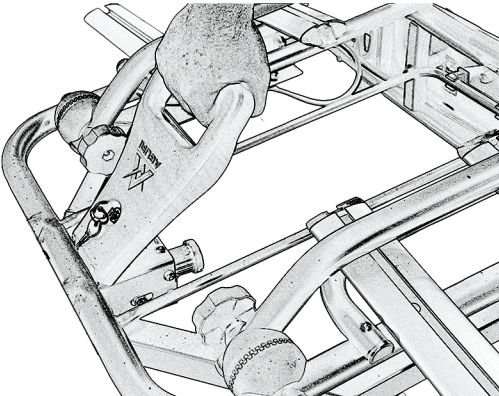

 
4.

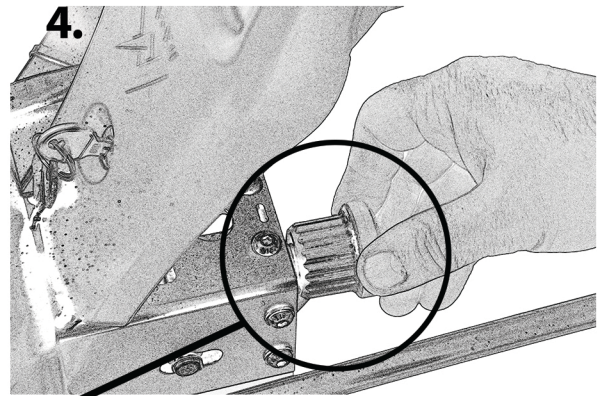

 
5.

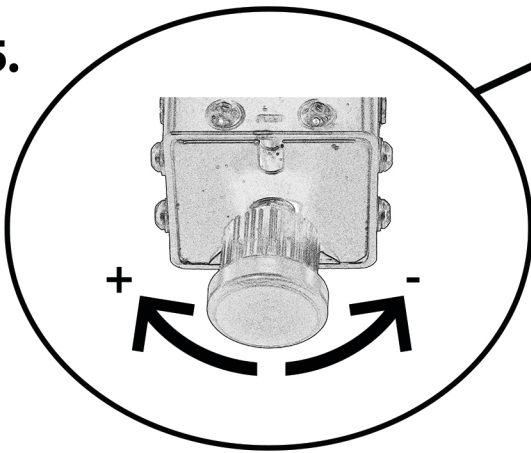

 6.

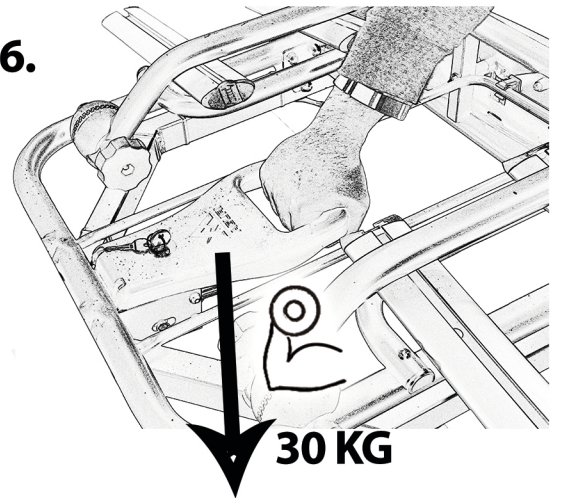

 
7.

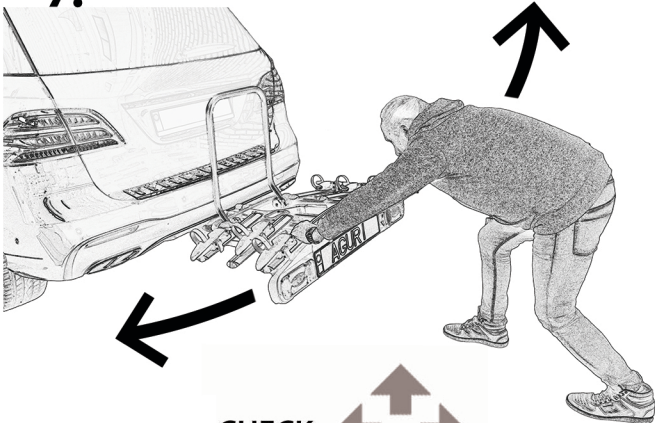


CHECK






  8.


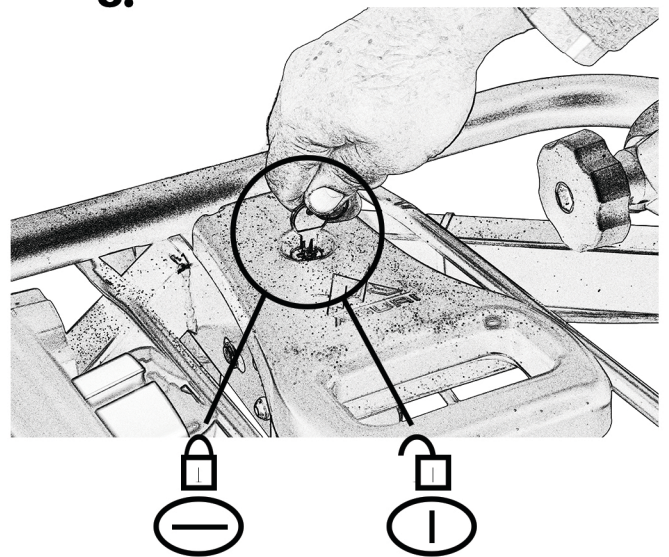






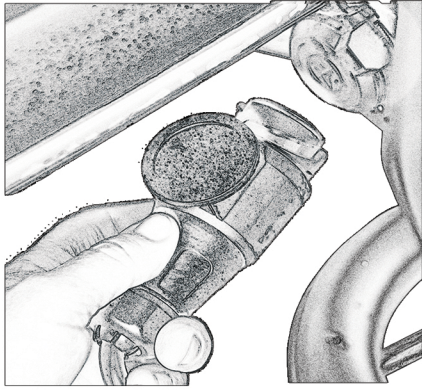


13 PIN



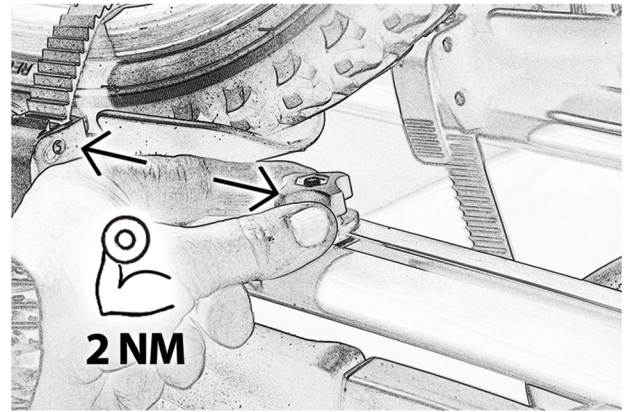 
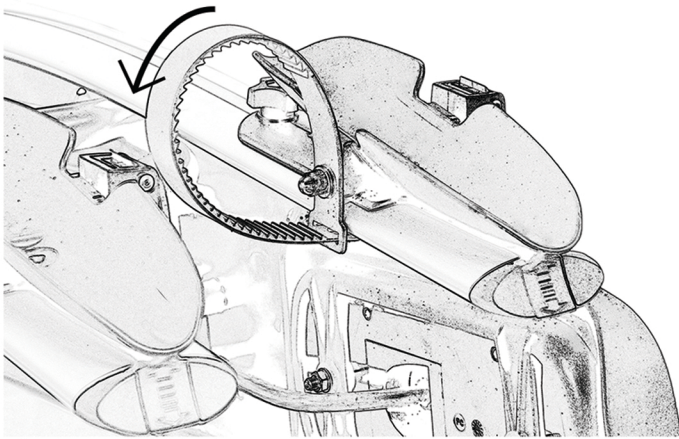 
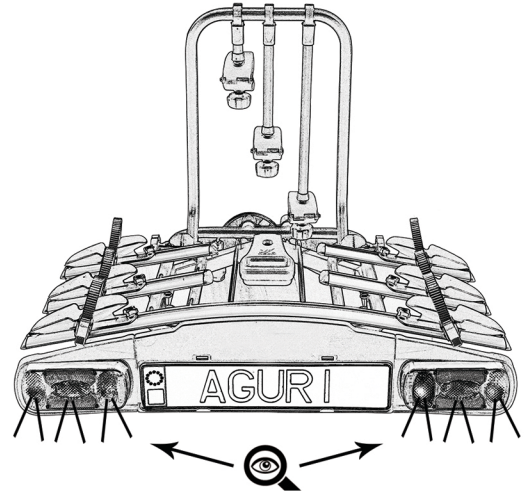 










2 NM

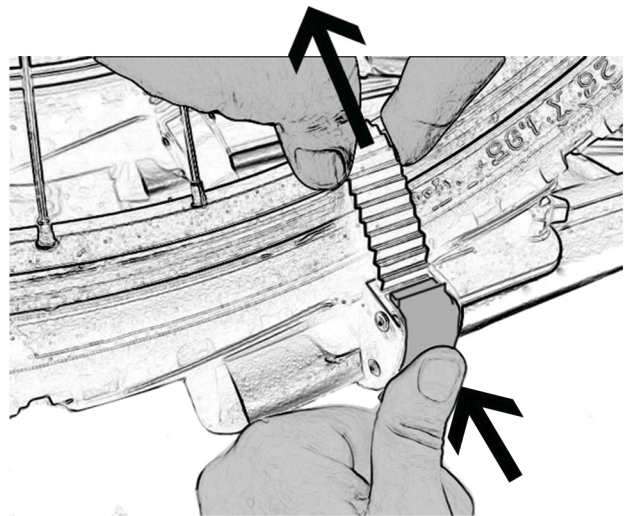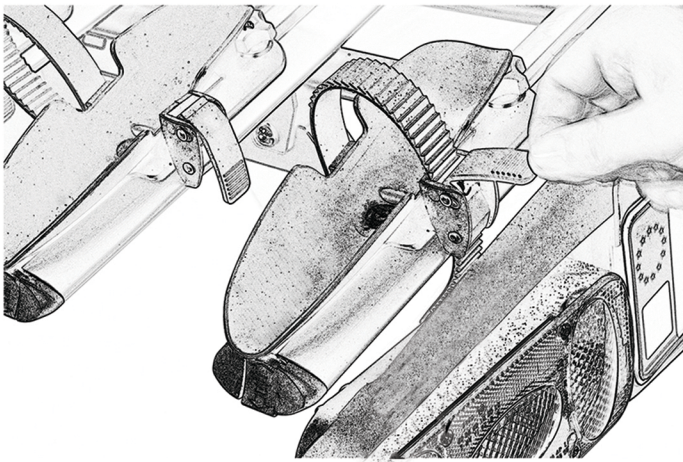  


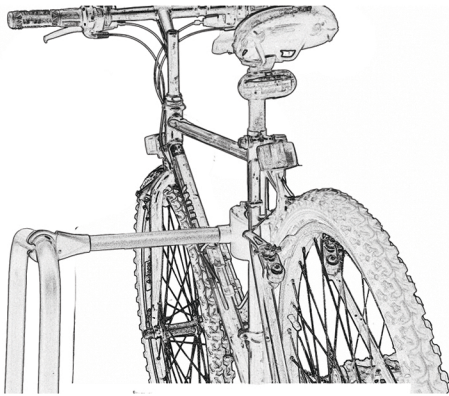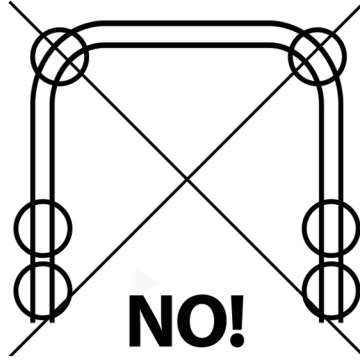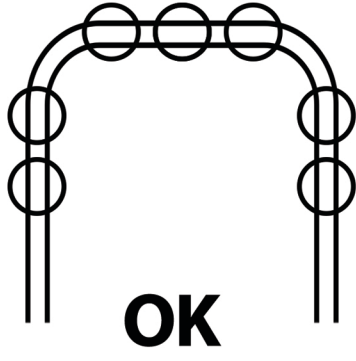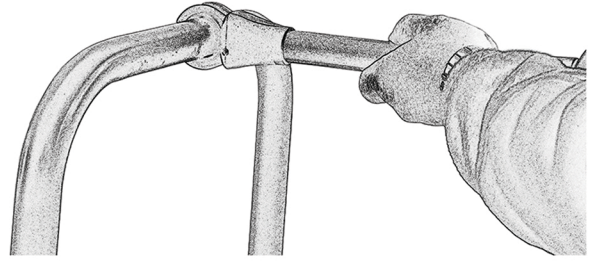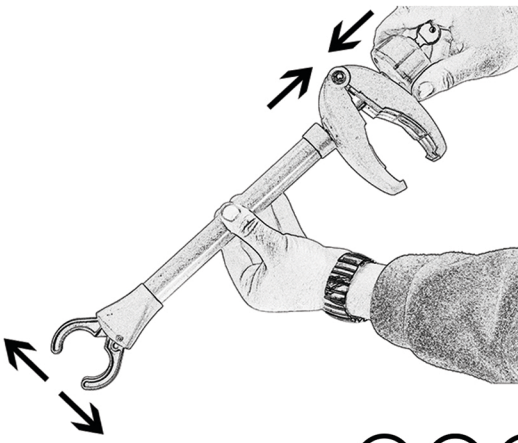     


OK

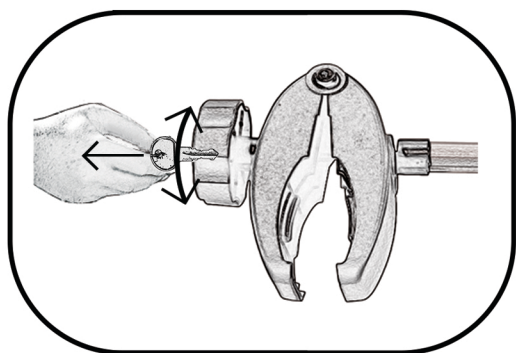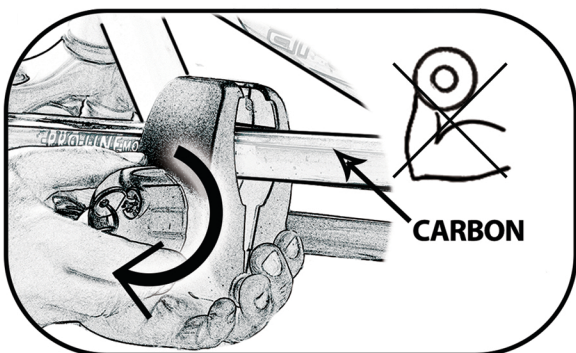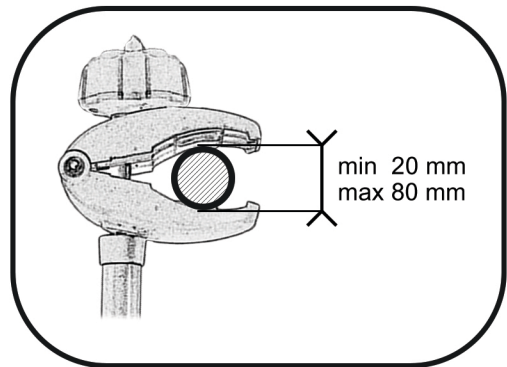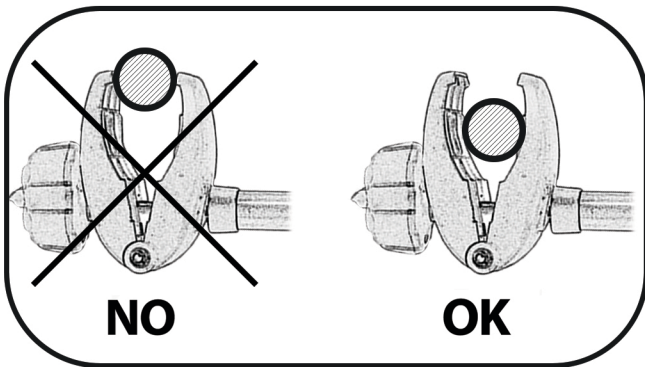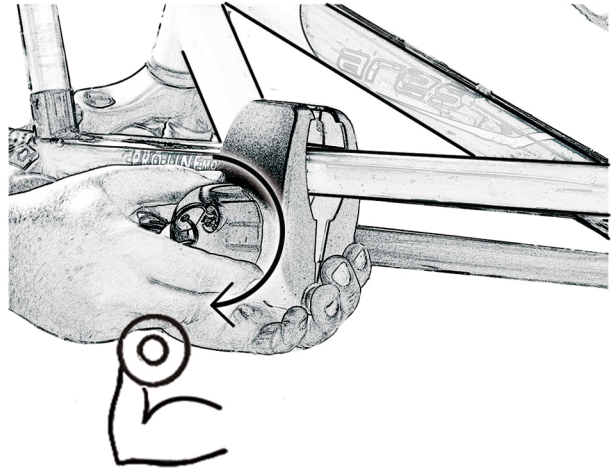     

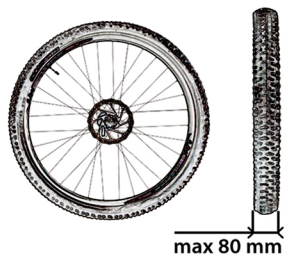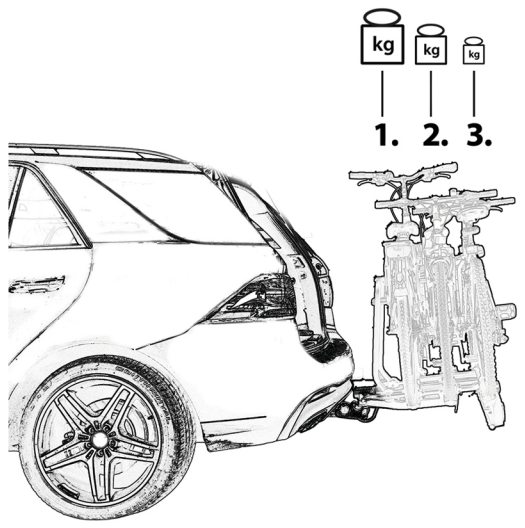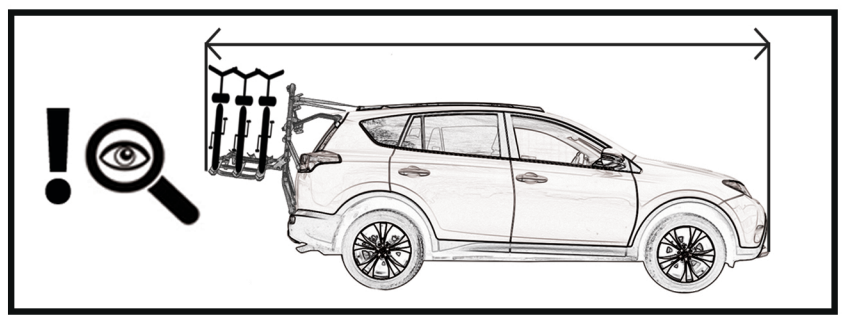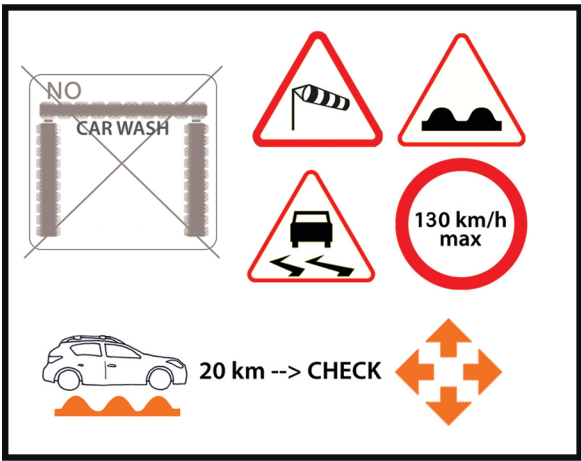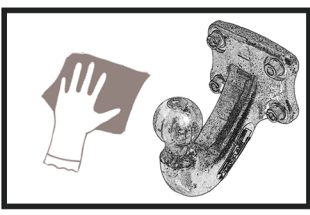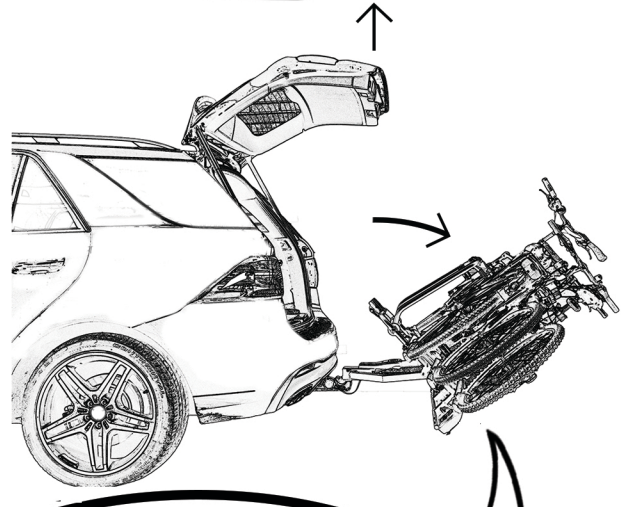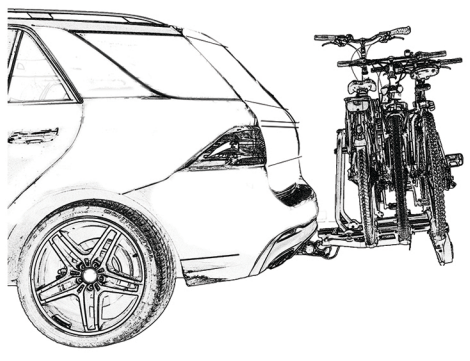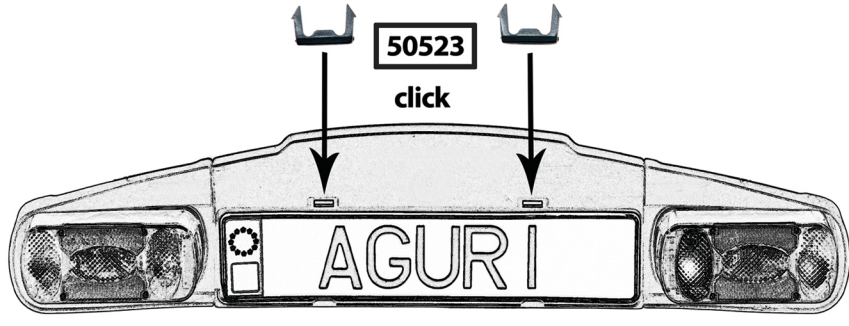        

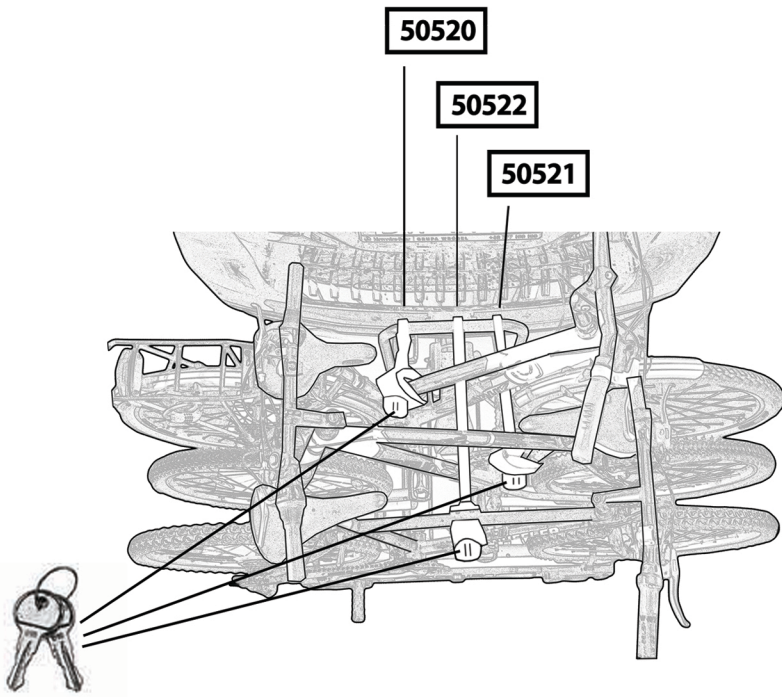 

 
- 1.
- 2.
- 3.

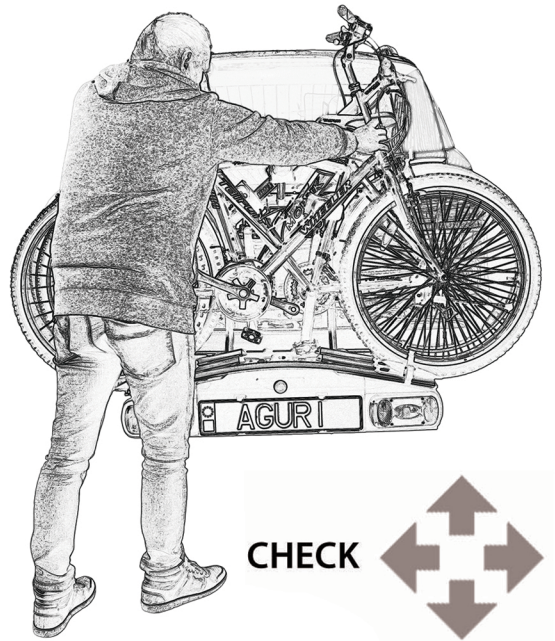


CHECK



 ACCESSORIES

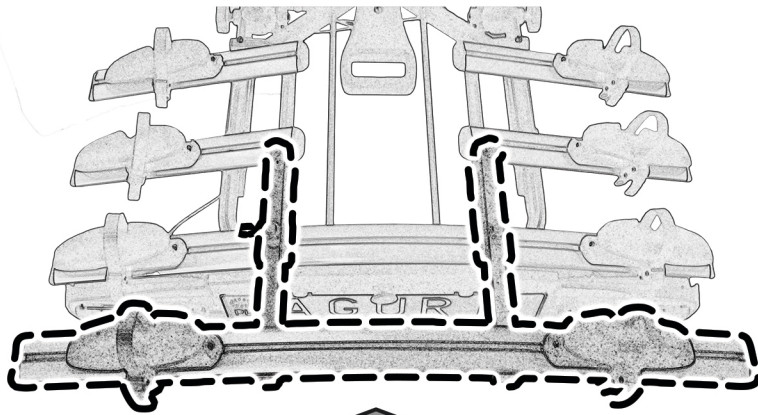

50532

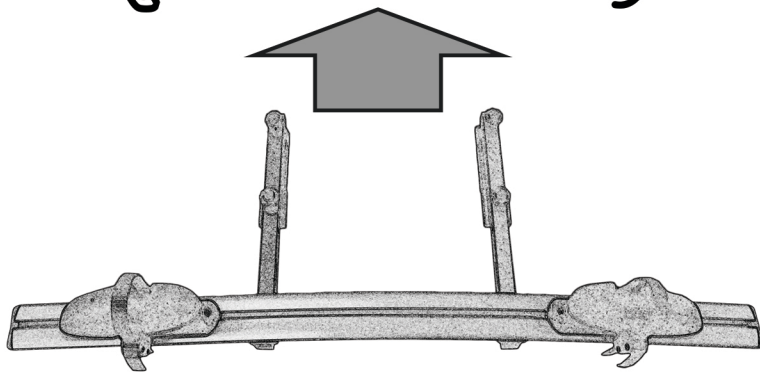 


ADAPTER

50518




 40070

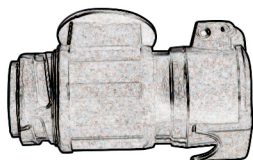

13 PIN / 7 PIN

 50072

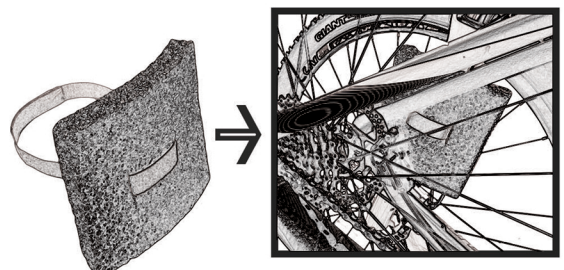

50538

30 x 30 cm