

50806

BOX ACTIVE BIKE 2 / 3




LIT Pritvirtinimo instrukcijos
PL Instrukcja montażu
CZ Návod na montáž
SK Návod na montáž
SLO Navodila za pritrjevanje
HR Uputa za sastavljanje
HU A felszerelés módja
GR Οδηγίες συναρμολόγησης
UA Інструкція з монтажу
BY Інструкцыя па мантажы
RO Instrucțiuni de montare
TK Uydurma talimat
N Monteringsveiledning

I Istruzioni per il montaggio
GB Fitting instructions
F Instructions de montage
D Montageanleitung
E Instrucciones de montaje
NL Montage-instructies
DK Monteringsinstruktion
FIN Asennusohje
S Monteringsanvisning
RU Инструкция по установке
PT Instruções de Montagem
EST Paigaldusjuhend
LAT Stiprināšanas instrukcija

INSTALLATION PARTS FOR ACTIVE BIKE 2

ADAPTER

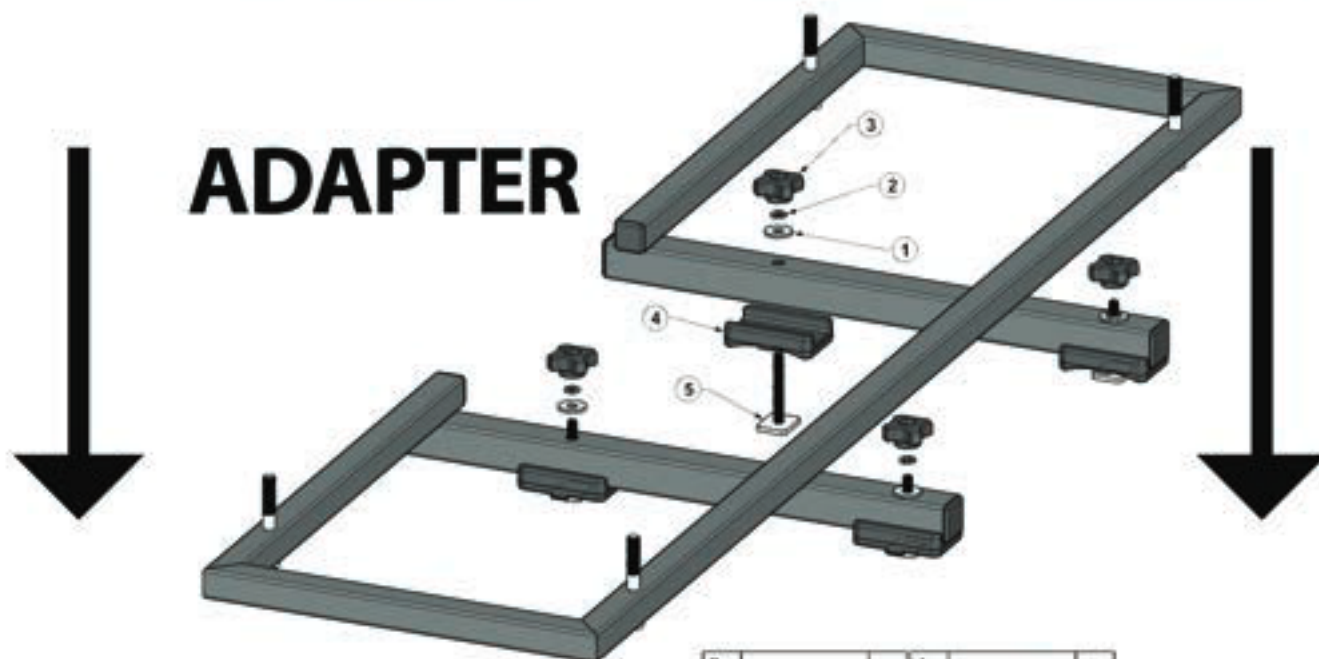

2		4		4
1		4		4
L.D.		Both	L.D.	Both
				5
				
				Both


ADAPTER INSTALLATION ACTIVE BIKE 2



4



4		4
3		4
2		4
1		4
L.D.	Pinça	Both
5		4
	Pinça	Both

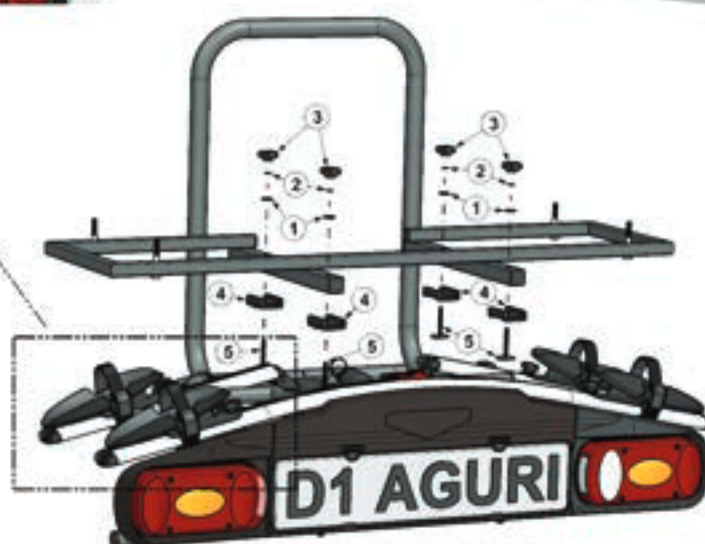


ACTIVE BIKE 2

ADAPTER






BOX TO ADAPTER INSTALLATION

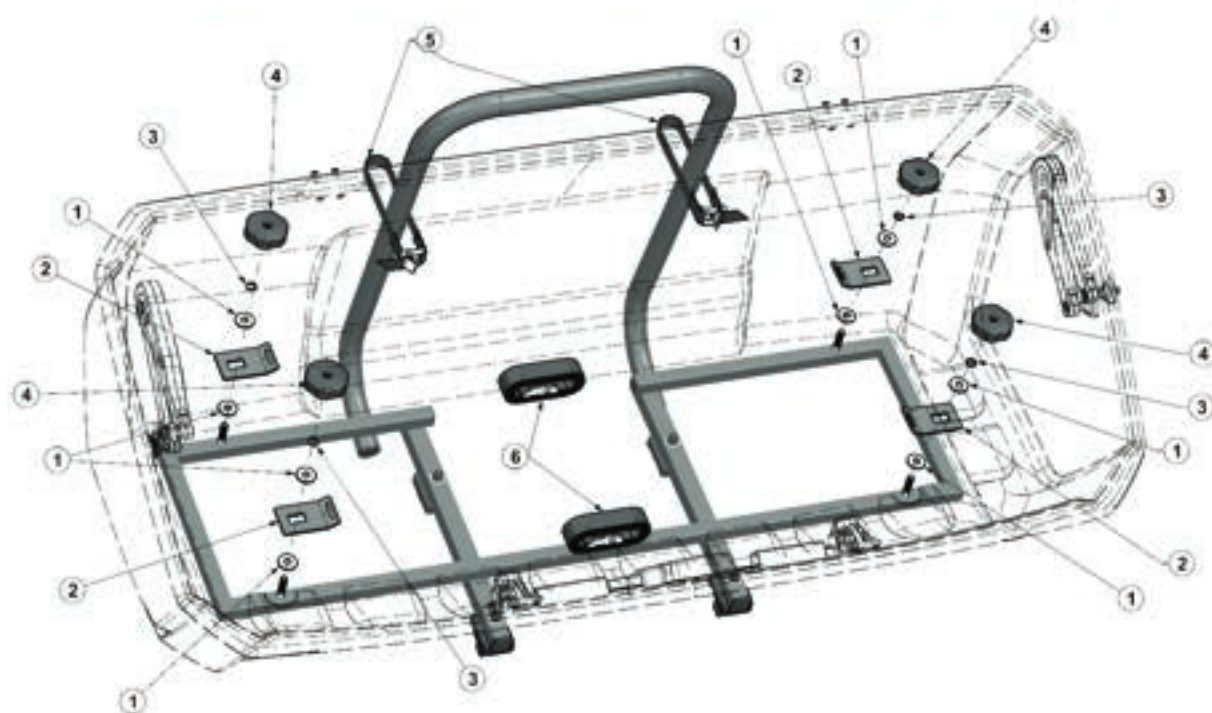

1		8	2		4	3		4	4		4	5		2	8		2
L.p.		Rofo	L.p.		Rofo	L.p.		Rofo	L.p.		Rofo	L.p.		Rofo	L.p.		Rofo


BELTS

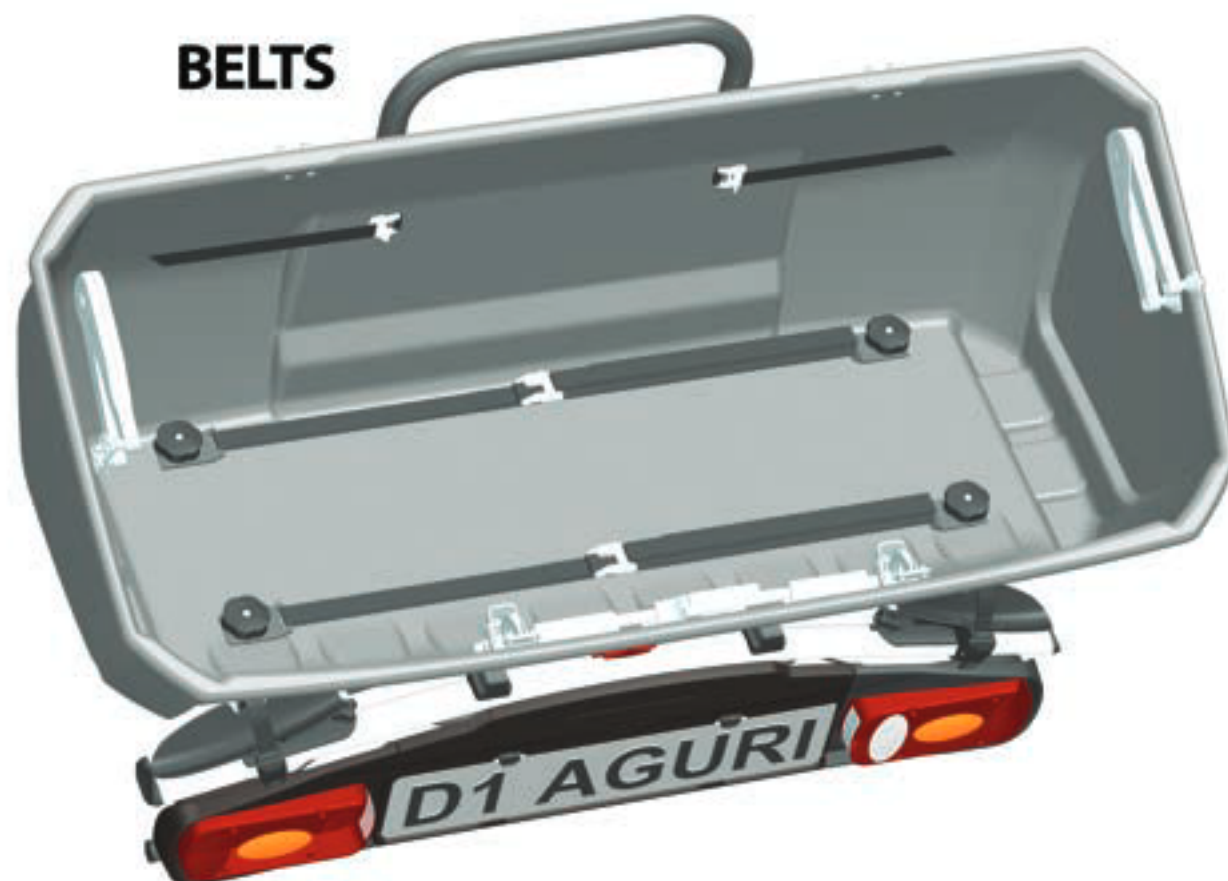


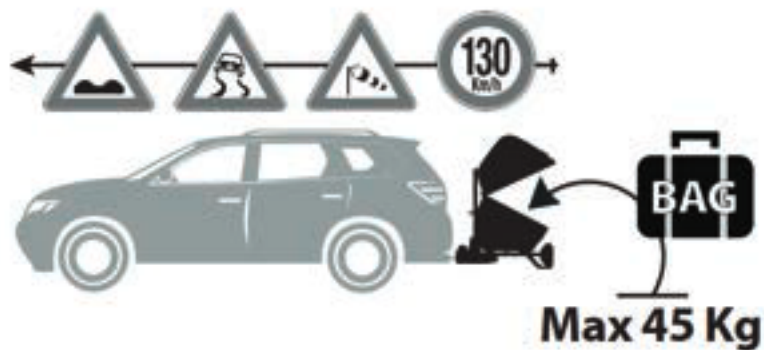
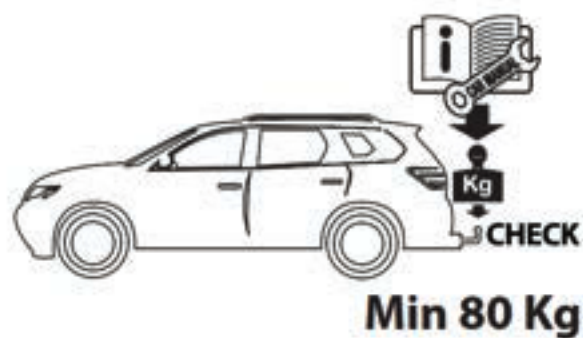


ACCESSORIES - OPTION

50806

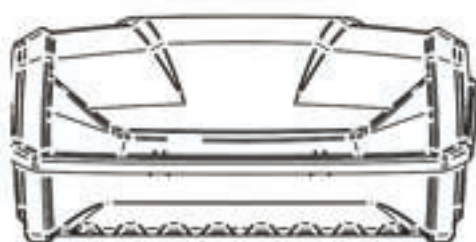

50805

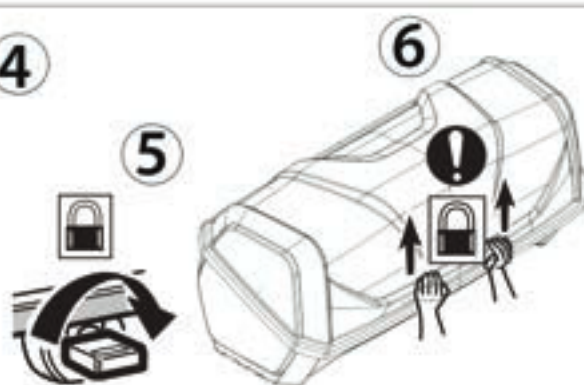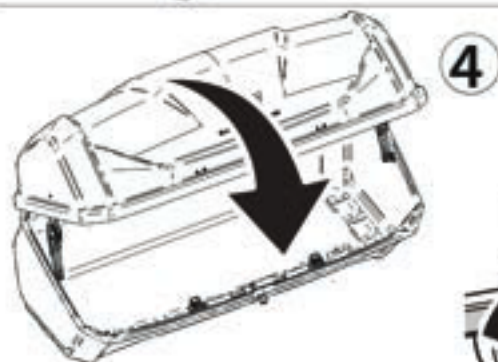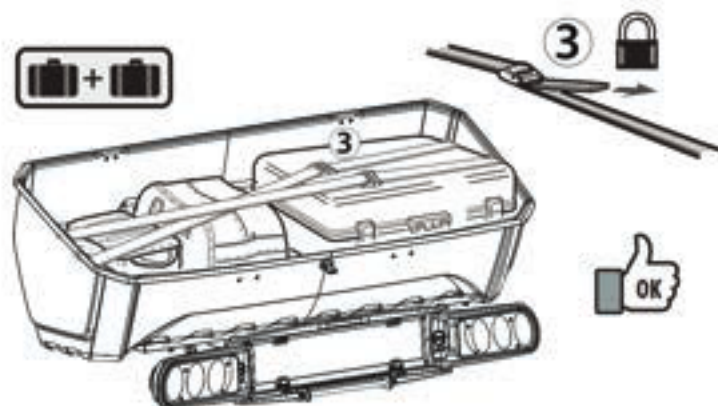

RE-CHECK



0 km

100 km

1000 km



car wash

